


#### THE PEELLE COMPANY

FREIGHT DOORS | CAR GATES | CAR ENCLOSURES T 1800 787 5020 F 1905 846 2161 www.peelledoor.com

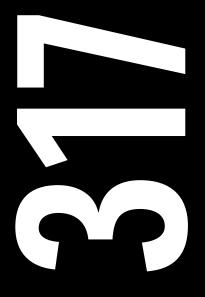



# INSTALLATION & MAINTENANCE GUIDE

**Horizontally Opening Product Line** 

**Landing Door and Car Door** 

REFER TO GUIDE 315 HSD DOOR OPERATOR



### Copyright

Copyright 2006, The Peelle Company Ltd. All Rights Reserved. This document may not be reproduced, electronically or mechanically, in whole or in part, without written permission from The Peelle Company Ltd.

#### **Trademarks**

All trademarks or registered product names appearing in this document are the exclusive property of the respective owners.

#### Warning and Disclaimer

Although every effort has been made to make this document as complete and accurate as possible, The Peelle Company Ltd. and the document authors, publishers, distributors, and representatives have neither liability nor responsibility for any loss or damage arising from information contained in this document or from informational errors or omissions. Information contained in this document shall not be deemed to constitute a commitment to provide service, equipment, or software by The Peelle Company Ltd. or the document authors, publishers, distributors, or representatives.

#### Limited Warranty

Peelle warrants to the Customer that goods and services sold will be free from defects in material, workmanship and title and will conform to any mutually agreed upon specifications. If any failure to meet this warranty appears within one year from the date of shipment of the goods or completion of the services, on the condition that Peelle be promptly notified in writing, Peelle will correct any such failure by re-performing any defective portion of the services furnished and supplying conforming goods. If the contract covers installation, repair or maintenance, Peelle will correct the failure by re-performing any defective service, and either repairing or replacing (at its option) any defective goods furnished and any damaged equipment upon which the service was performed resulting from defective service. If re-performance is not practicable, Peelle will furnish without charge services in an amount essentially equal to those which, in Peelle's sole judgment, would have been required for re-performance.

The preceding paragraph a sets for the exclusive remedy for all claims based on failure of, defect in, goods or services sold hereunder, whether the failure or defect arises before or during the warranty period, and whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability or otherwise. The foregoing warranty is exclusive and is in lieu of all other warranties whether written, oral, implied or statutory.

AS TO ALL GOODS SOLD, NO IMPLIED STATUTORY WARRANTEE OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE SHALL APPLY.



### **Table of Contents**

Car Sill Installation

Pg 1

**Landing Door Installation** 

Pg 2-16

Car Door Installation

Pg 17-33

Troubleshooting

Pg 35

Appendix A

Pg 36-38

Maintenance

Look for the Blue Box




### **Job Site Inspection**

Before beginning the installation, ensure that the structural opening is the correct size and that there is adequate support for the entrance sill and header. The entrance must attach to masonry or heavy steel struts. Drywall and light steel studs are not sufficient support.


Also, the elevator must be assembled to a "working platform" stage which can be operated by temporary buttons mounted on the car.





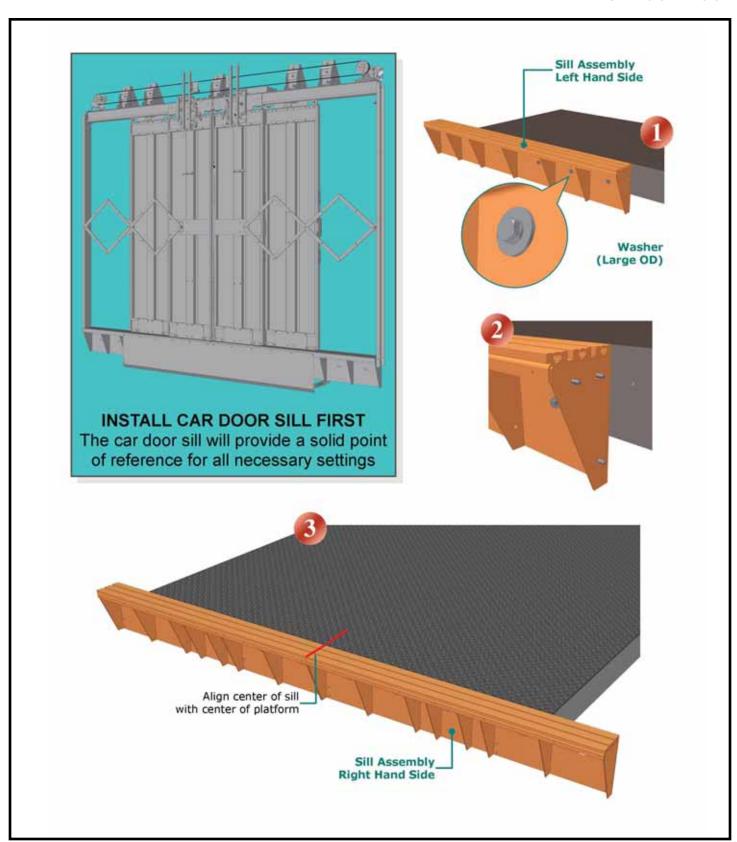




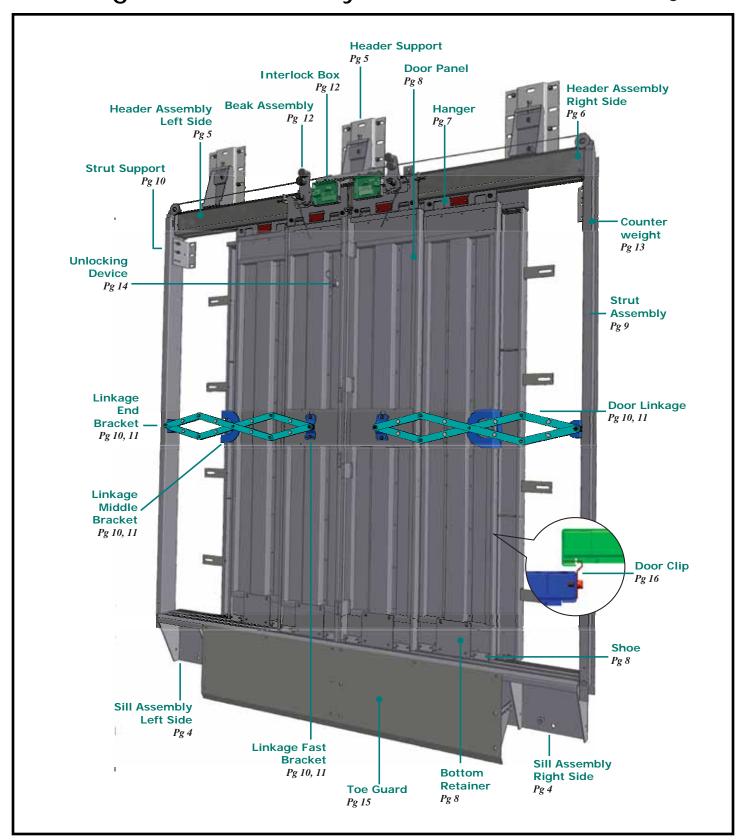




# **Entrance Frame Assembly**


### **HSD Landing Door**

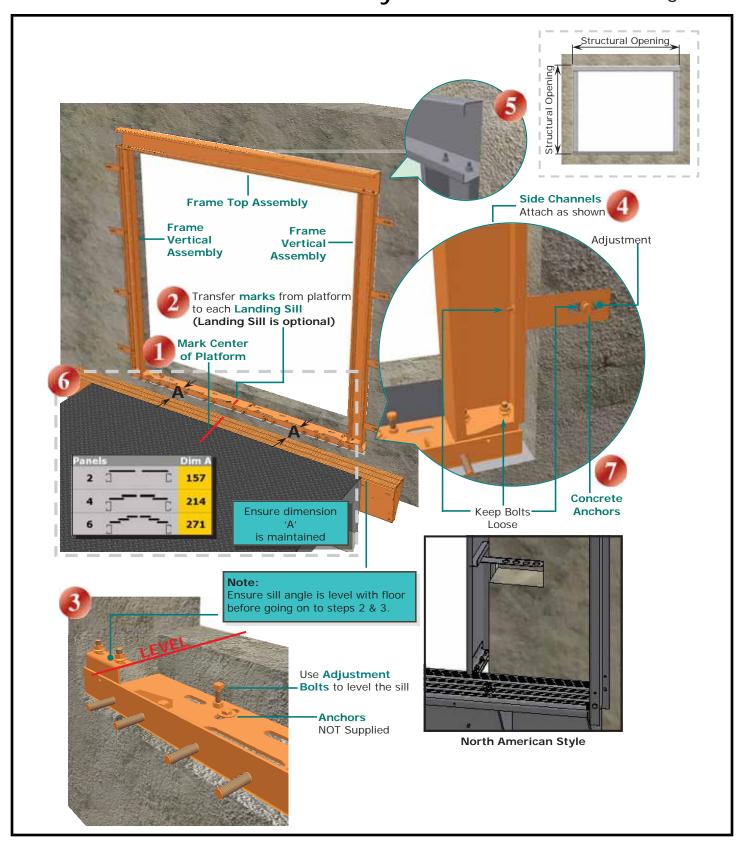




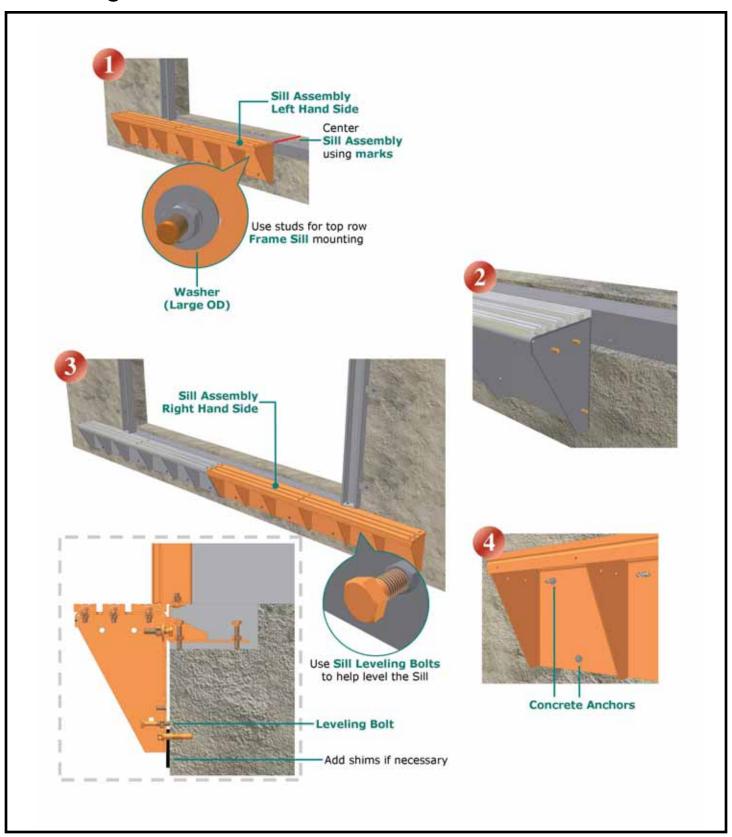




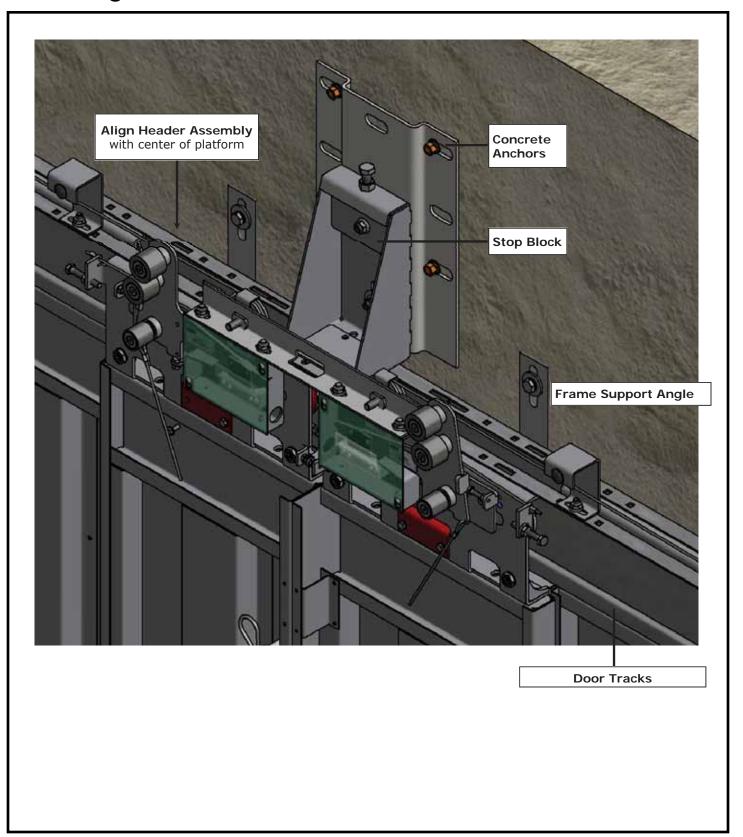

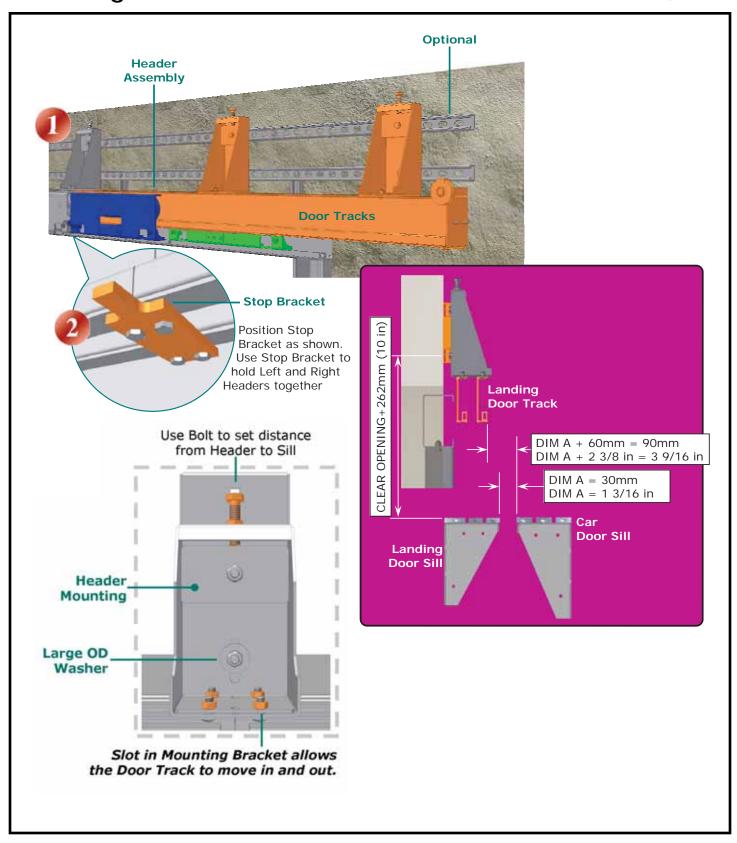




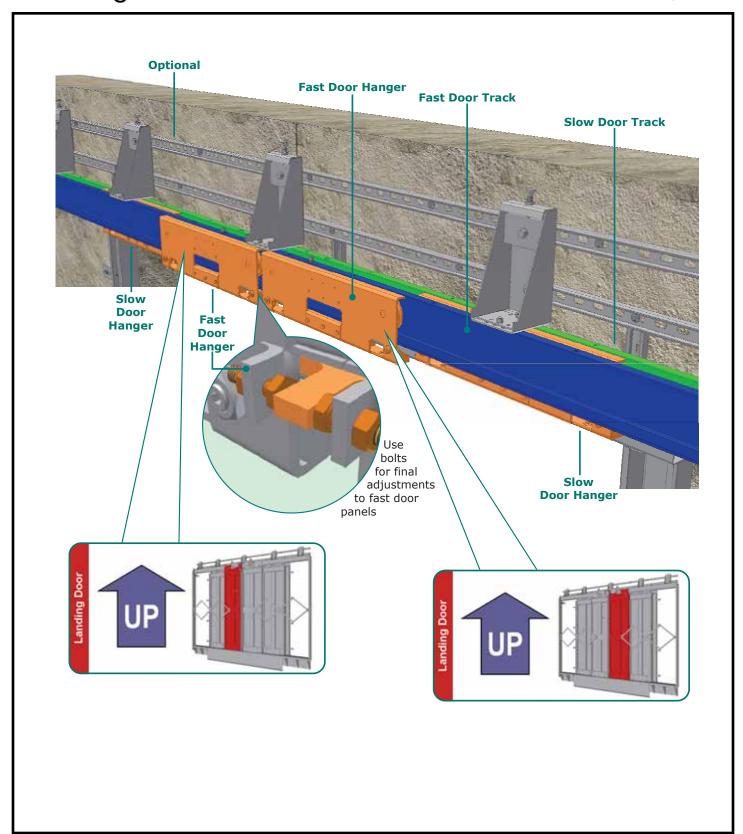




# Landing Header Installation

### **HSD Landing Door**

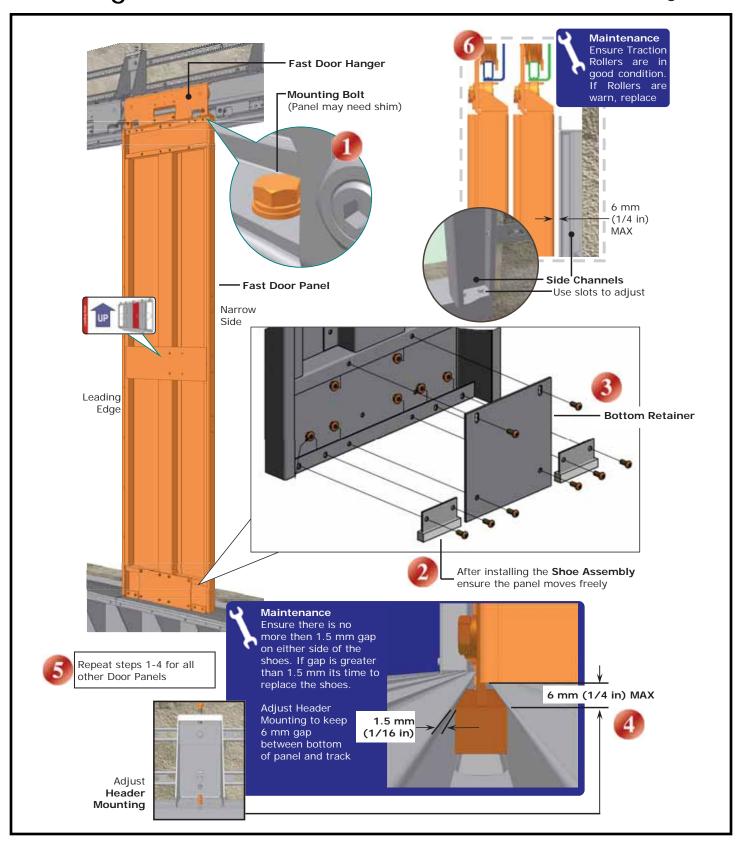







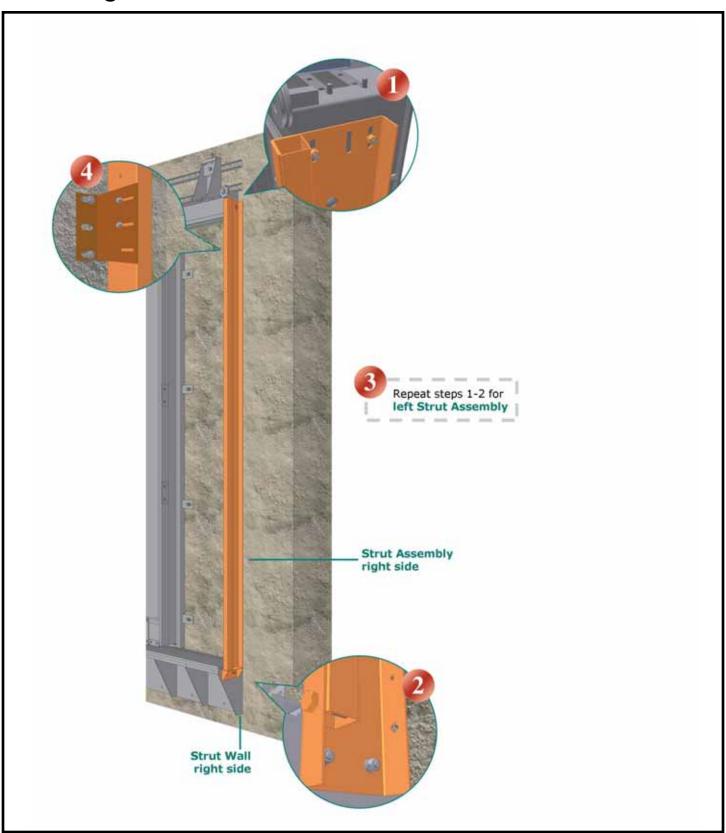




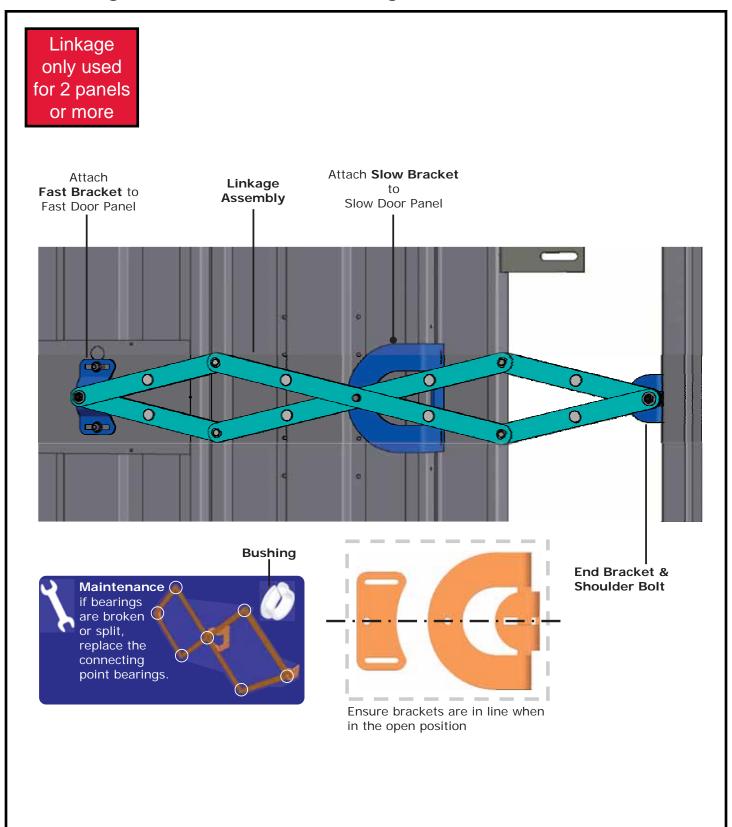


# Landing Door Linkage Adjustment HSD Landing Door

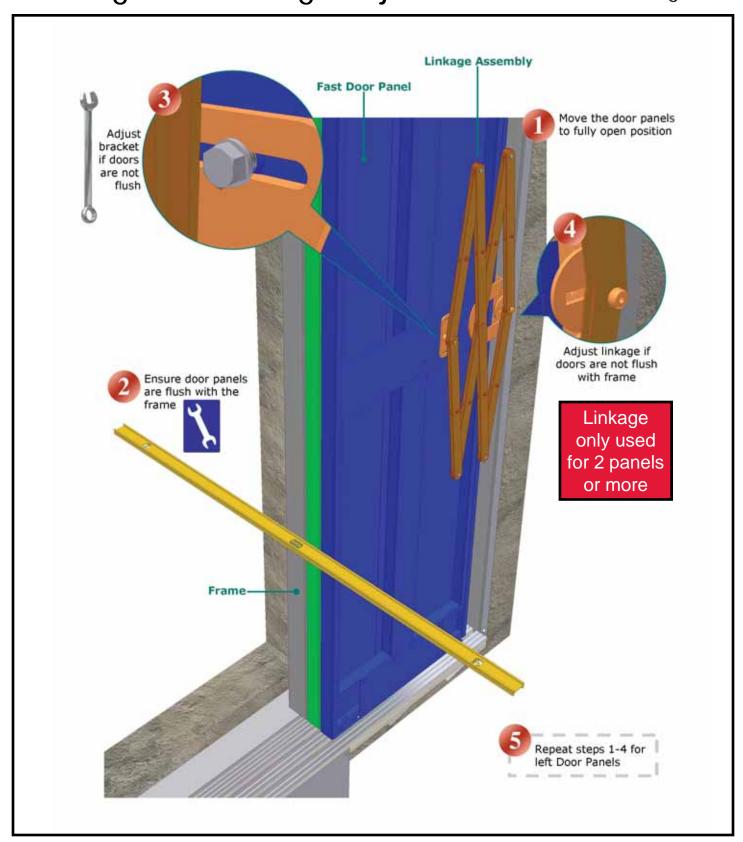




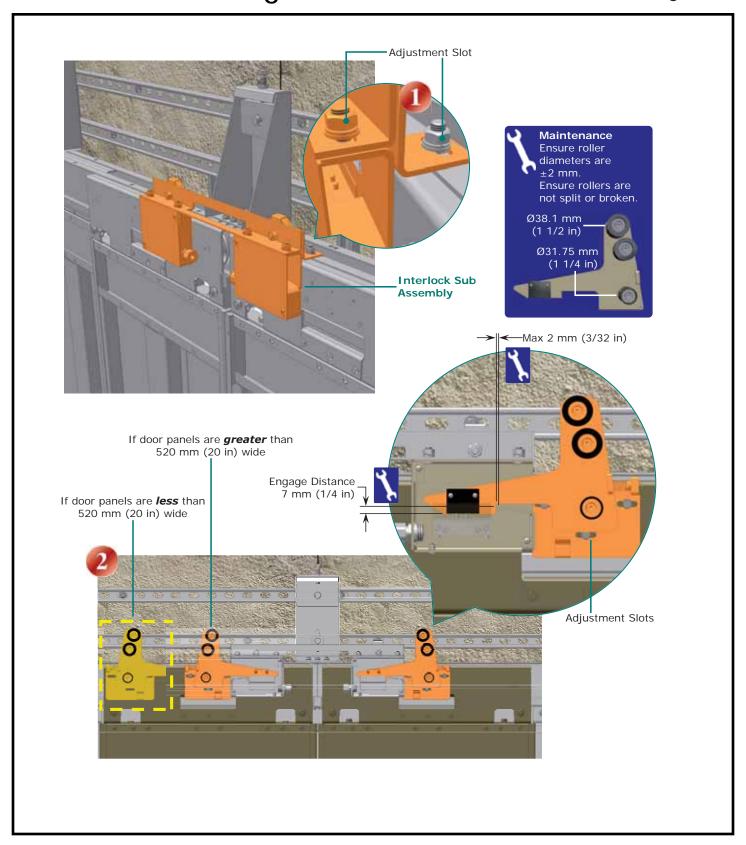




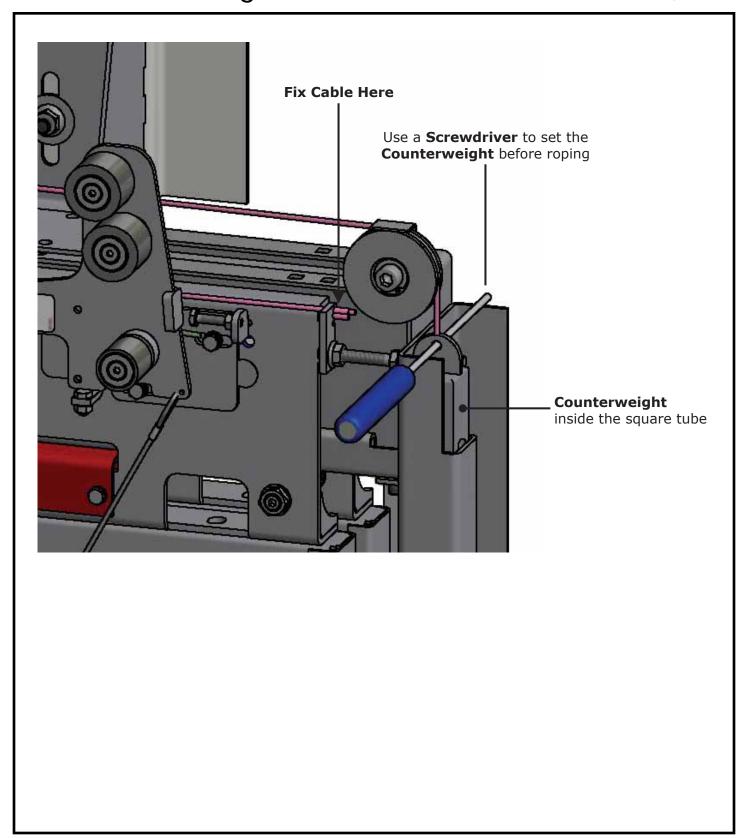

## Wire Roping (Counterweight & Unlocking Device) HSD Landing Door

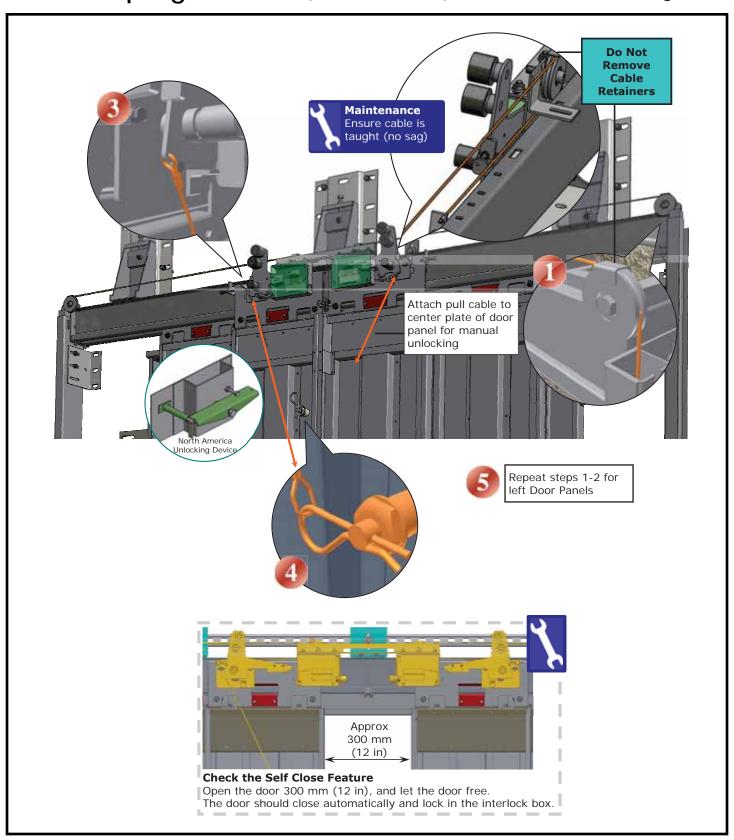




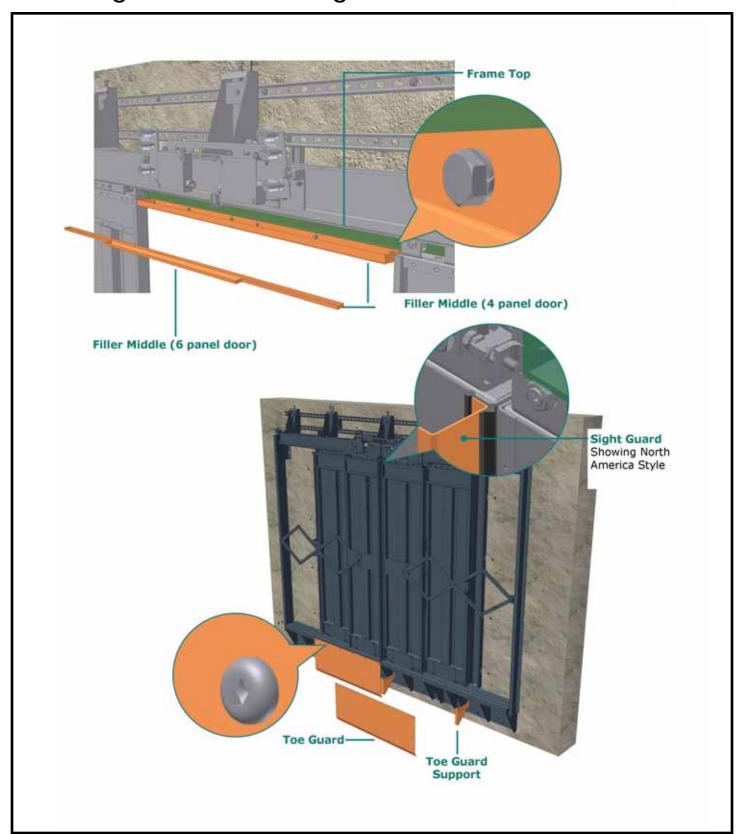






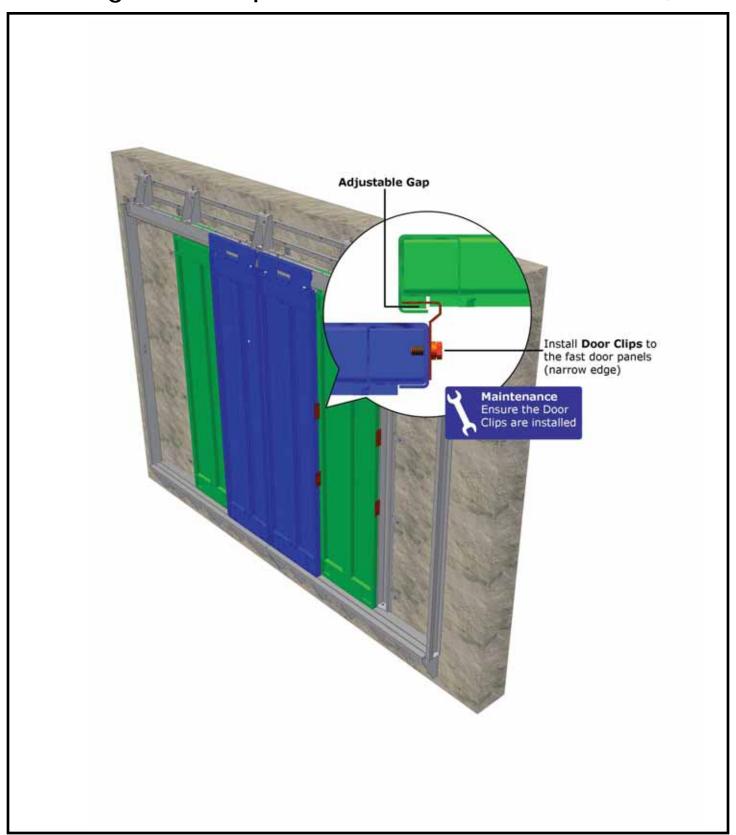




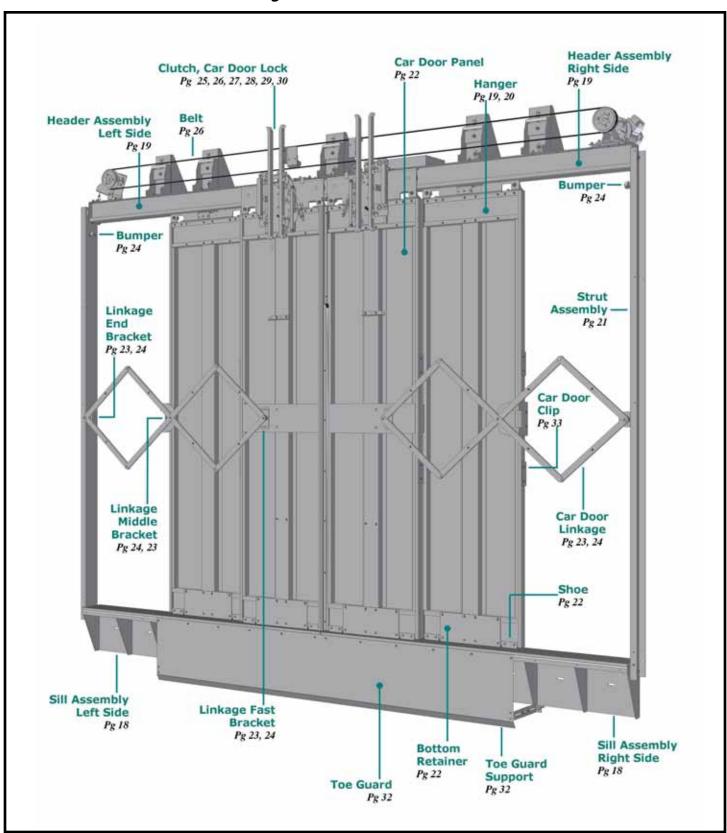



THE PEELLE COMPANY

FREIGHT DOORS | CAR GATES | CAR ENCLOSURES TECHNICAL SUPPORT 1-800-787-5020 ext 244

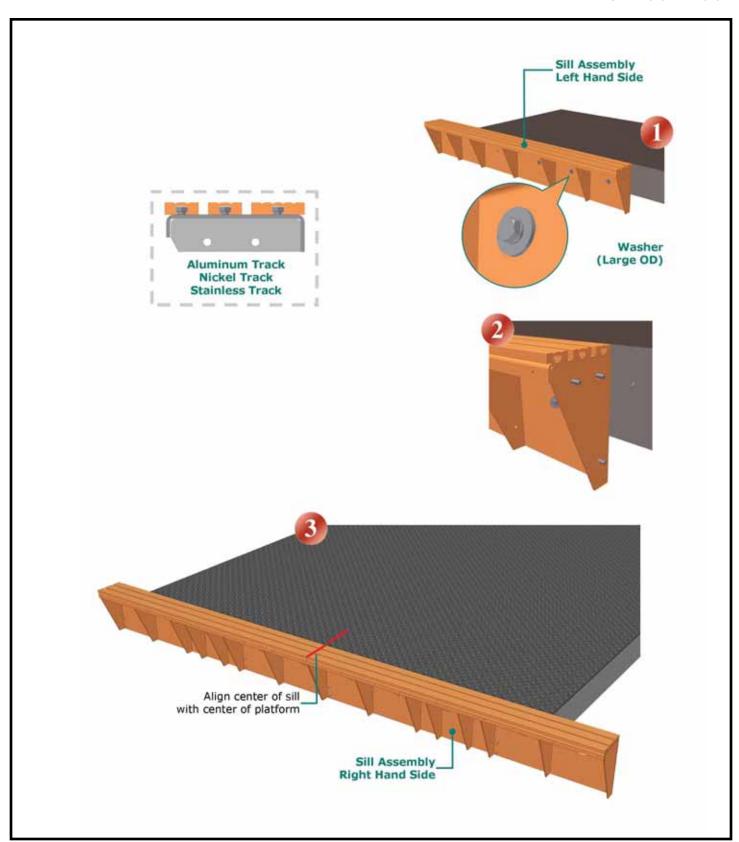





THE PEELLE COMPANY
FREIGHT DOORS | CAR GATES | CAR ENCLOSURES

**TECHNICAL SUPPORT** 1-800-787-5020 ext 244


18

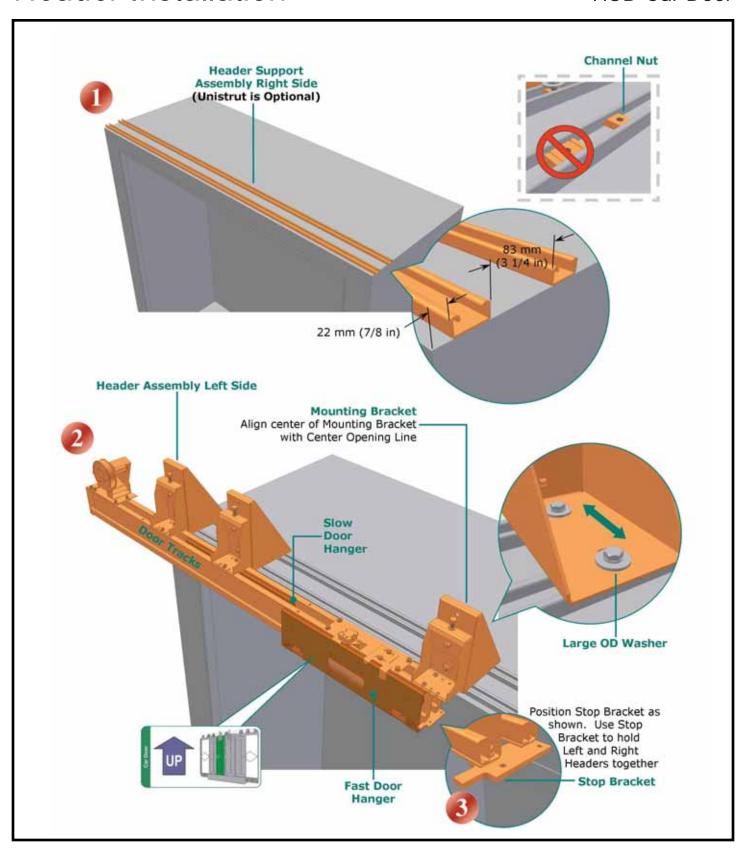




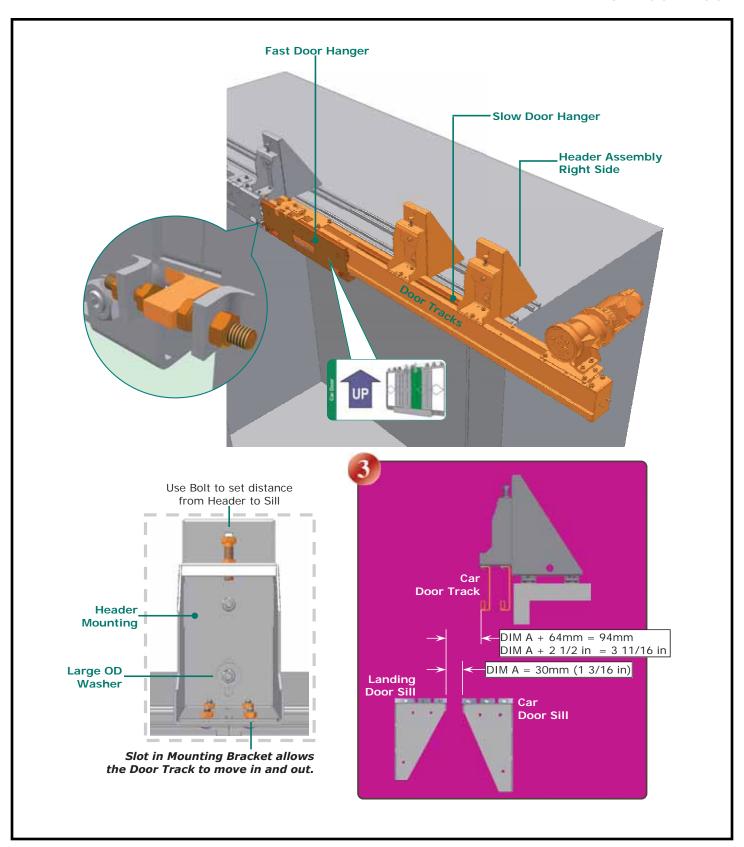




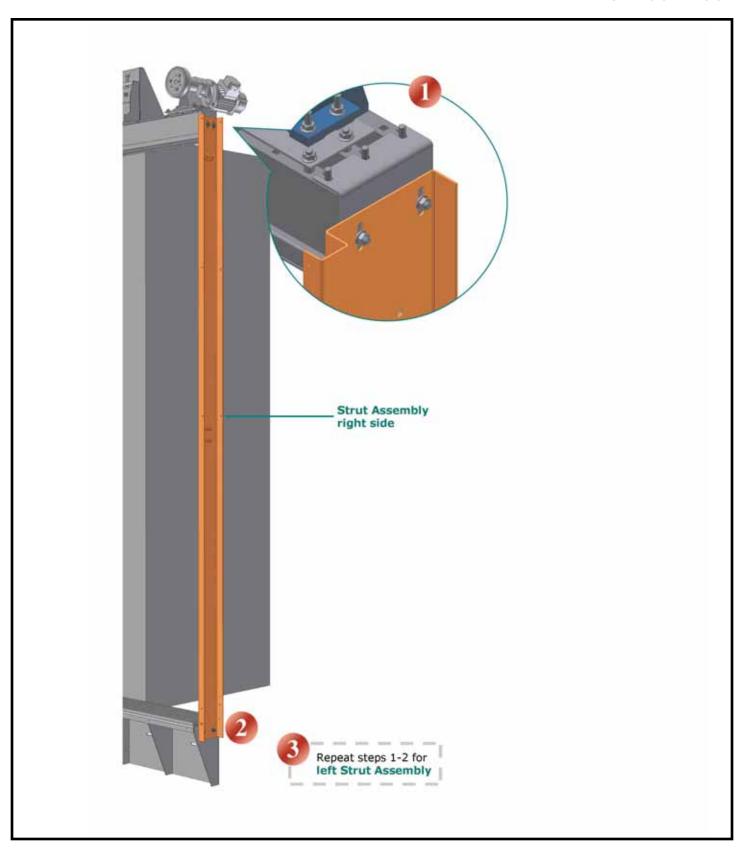




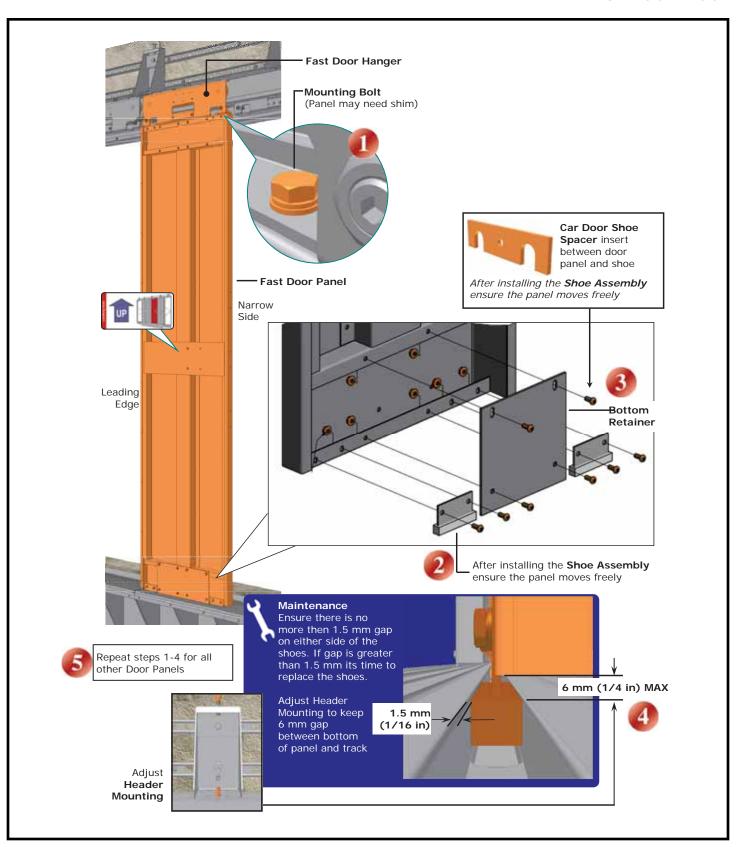




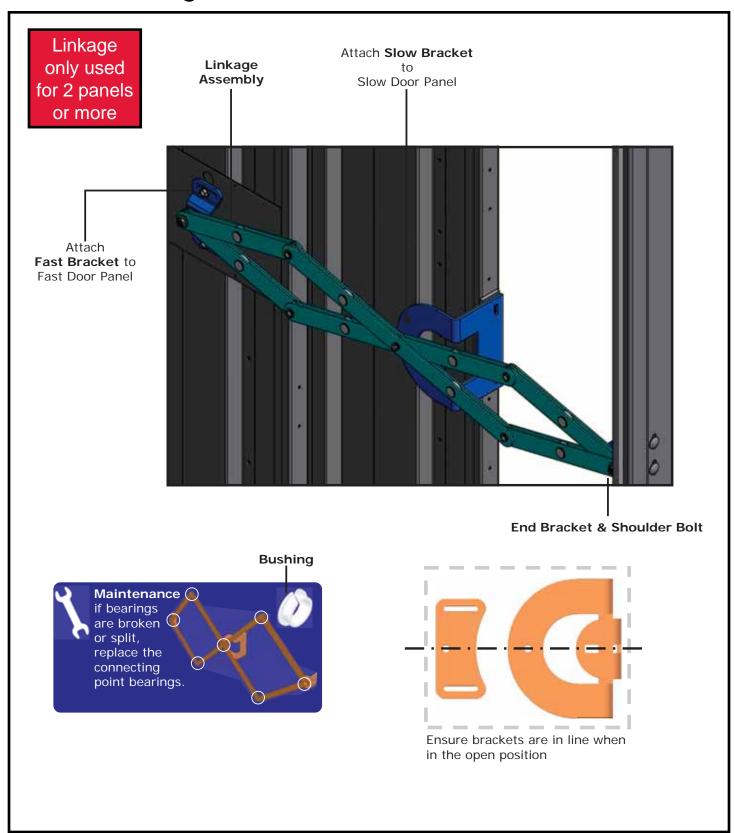




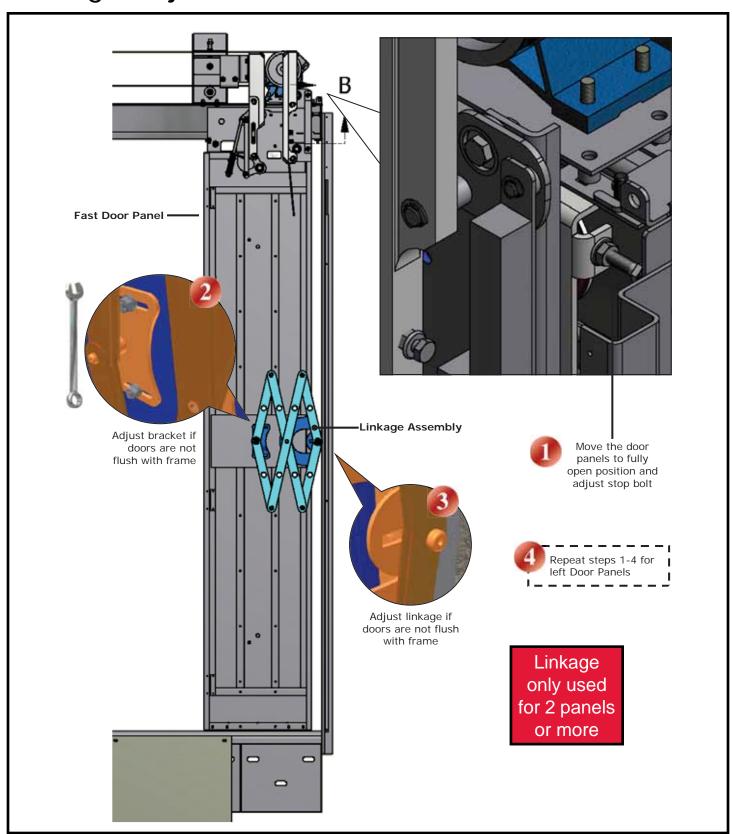




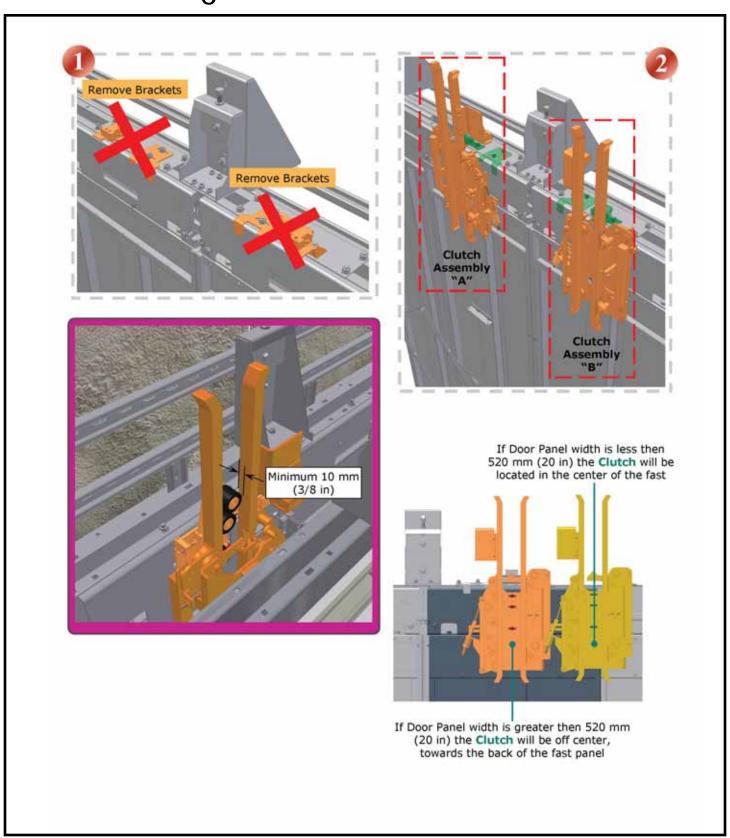




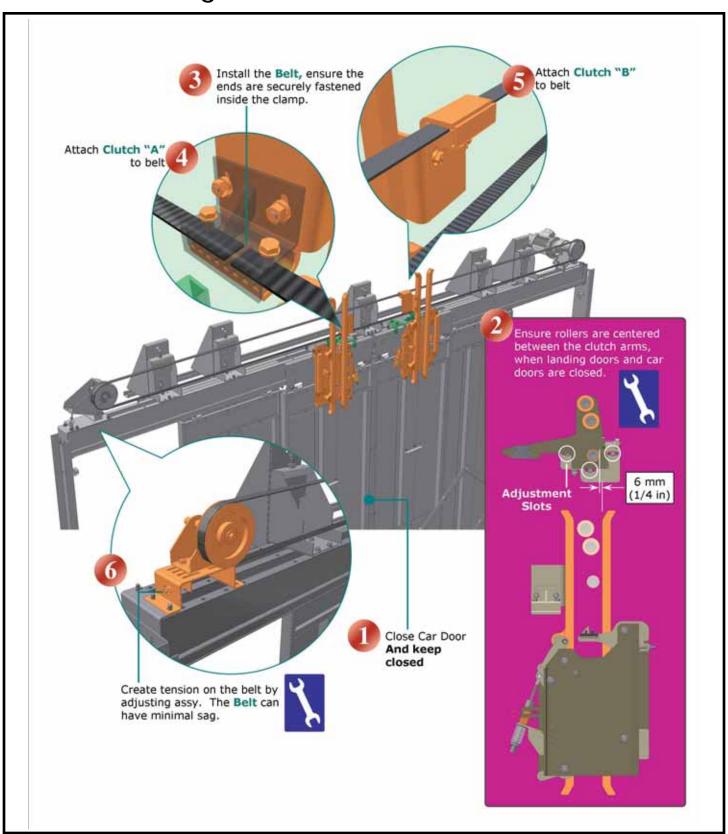



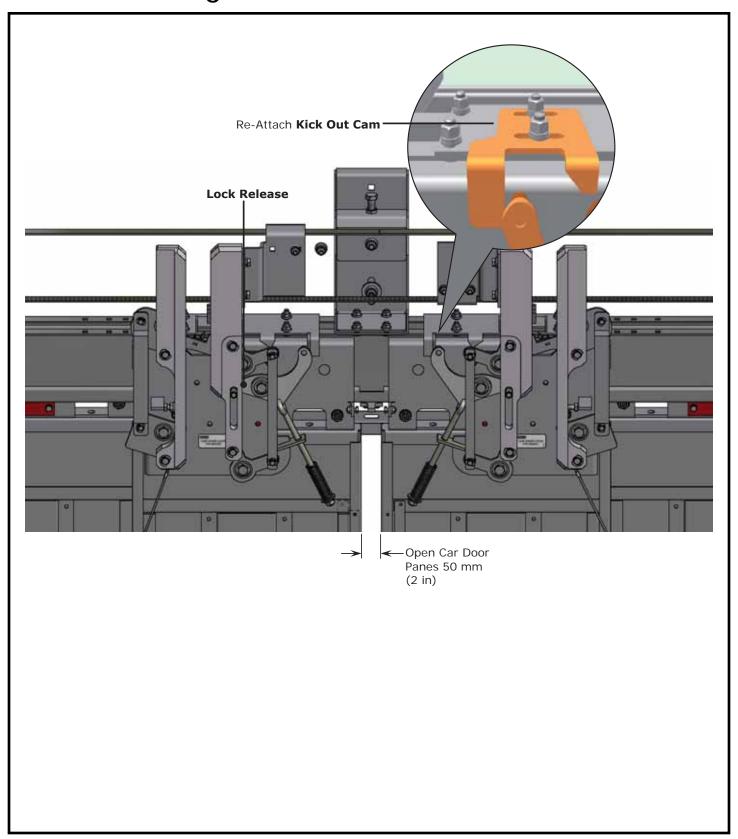




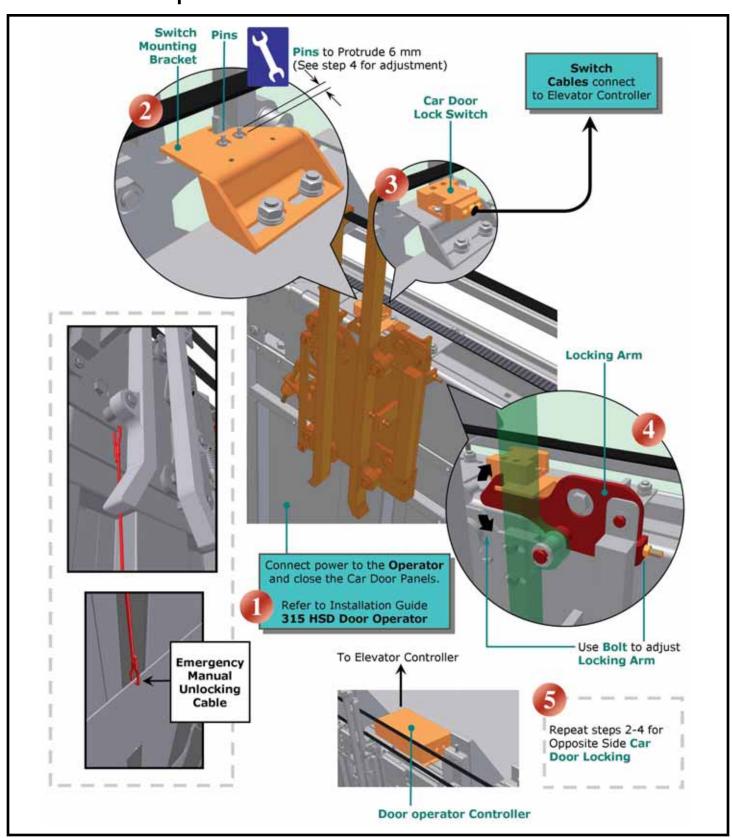





### Landing Door and Car Door in Locked Position Rollers are free and are resting in the locked position Belt Arm is held in position by Locking Arm is held in position the Door Operator by the Counterweight Landing Door is Locked Fully closed position The Belt is held in a stationary position by the Door Operator Car Door is locked Lock Release Arm wants to rotate down Roller wants to push the Belt Leg closed Tension Spring always pulls in this direction Counterweight pulls down

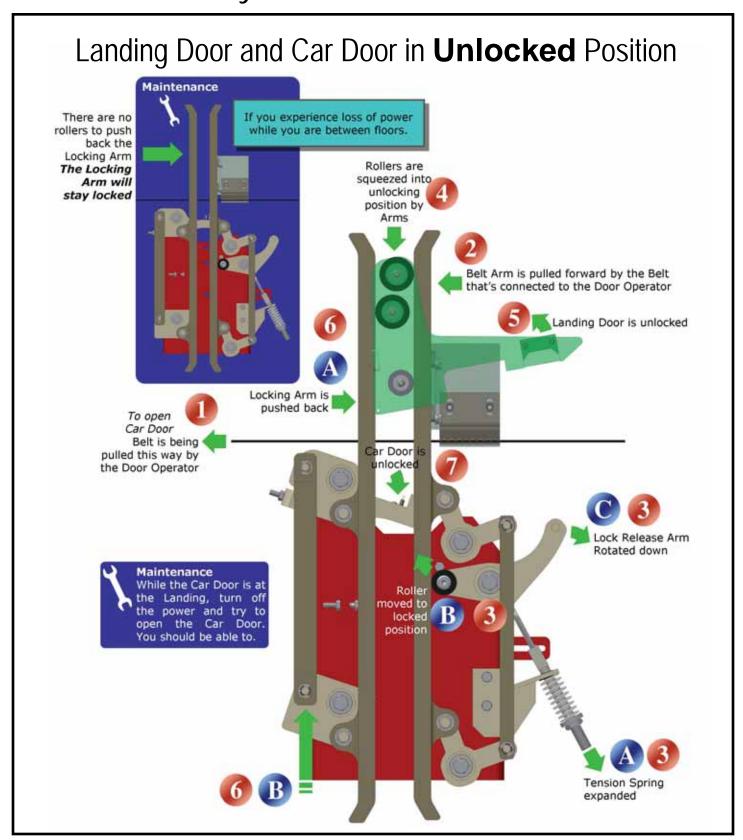




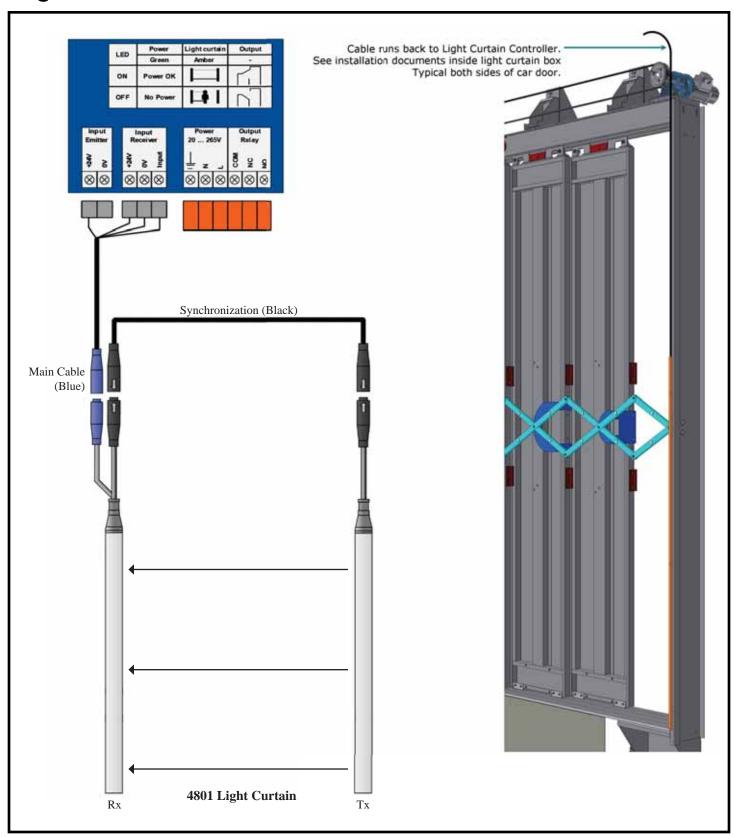




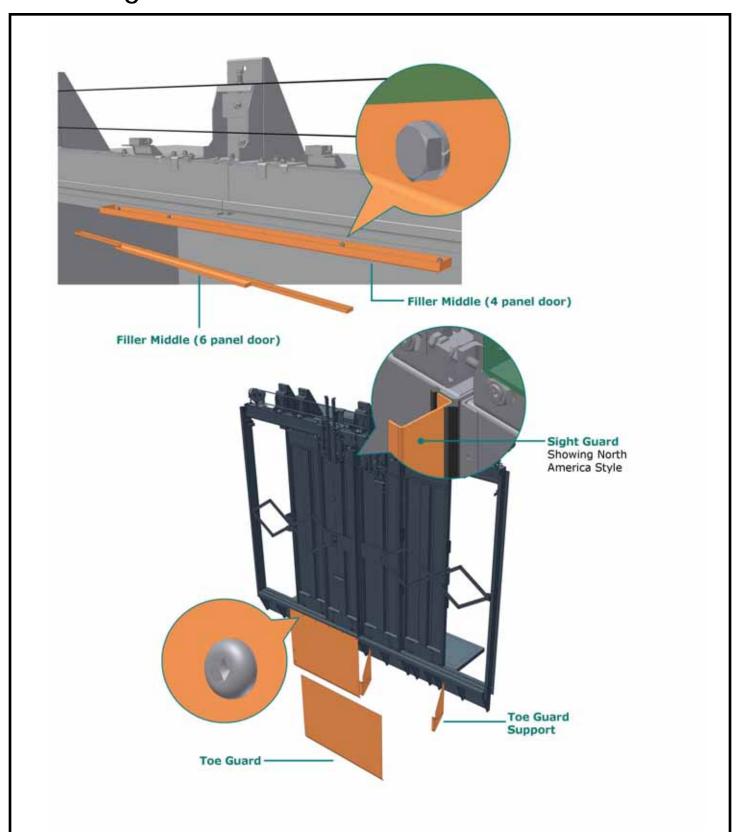




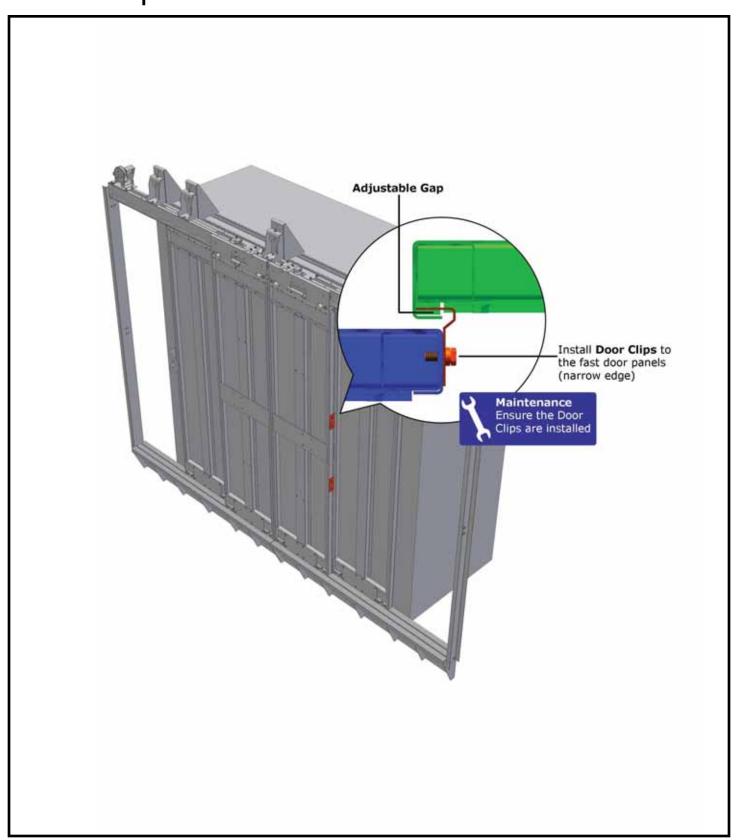




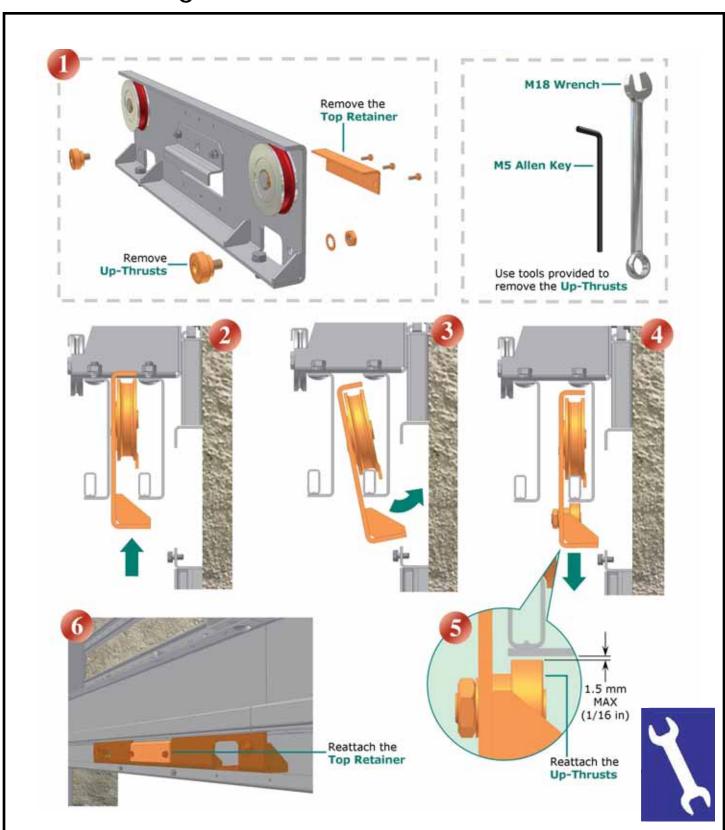




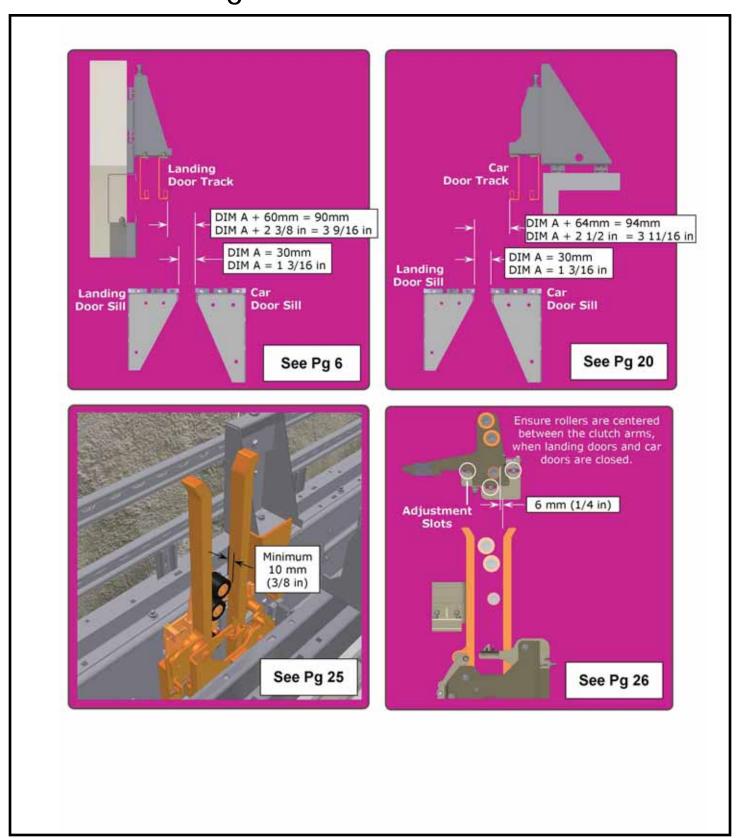

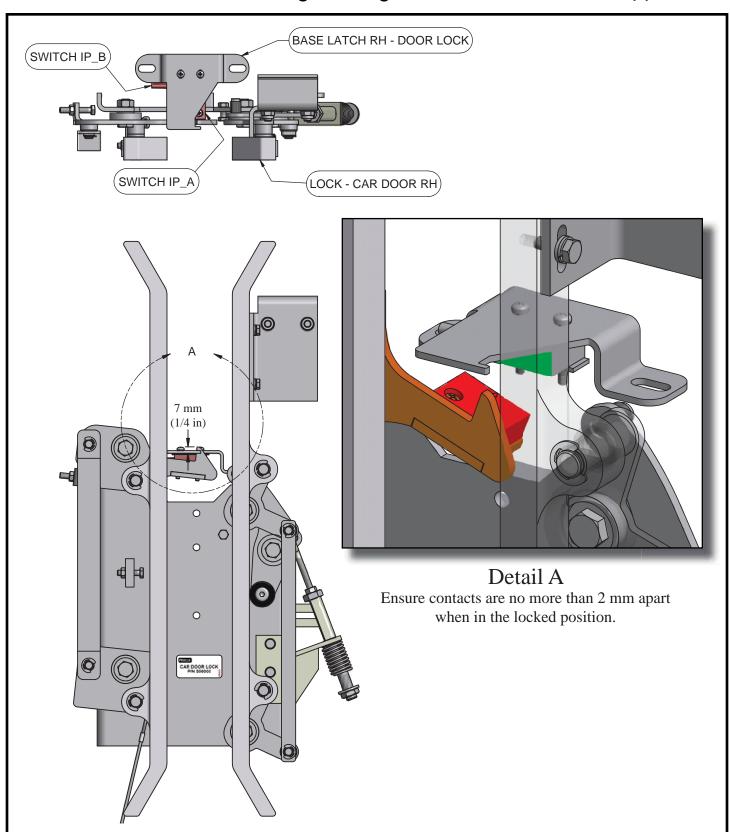



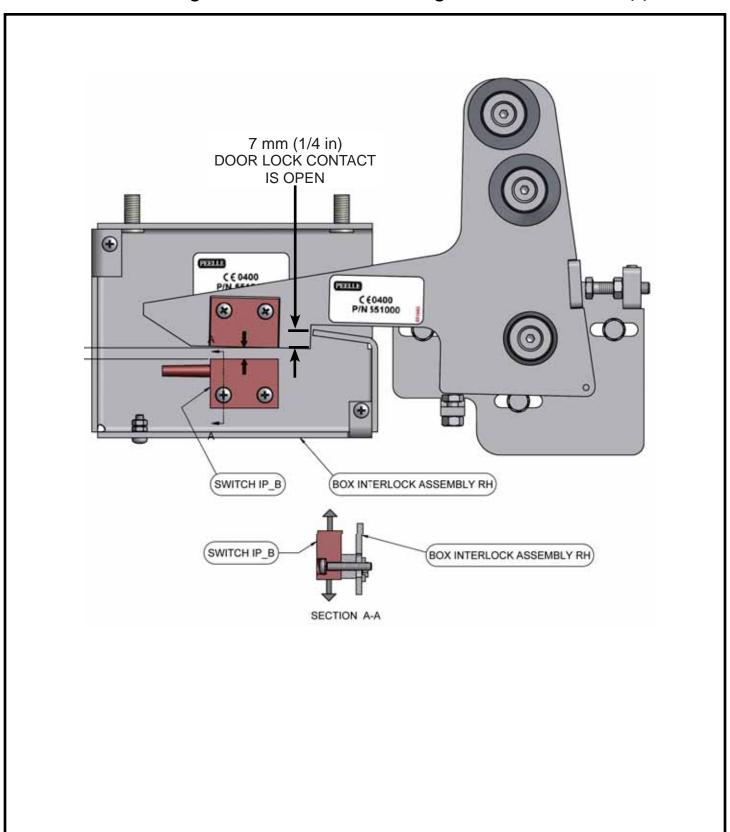





### THE PEELLE COMPANY

FREIGHT DOORS | CAR GATES | CAR ENCLOSURES





# **TECHNICAL SUPPORT** 1-800-787-5020 ext 275

### NORTH AMERICAN SALES

sales@peelledoor.com

### **EXPORT SALES**

exportsales@peelledoor.com



