

1. ALL LIMIT SWITCHES AND CONTACTS SHOWN
WITH NO ACTION APPLIED
2. @ TERMINAL CONNECTION ON DOOR CONTROLLER
3. ① COMPONENT TERMINAL CONNECTIONS
4. ② I/O TERMINAL CONNECTION ON PLC
5. CAR AND HALL PUSH BUTTONS BY OTHERS

1. ALL LIMIT SWITCHES AND CONTACTS SHOWN

	SPECIAL PARTS	We still service equipment we built 50 years ago TITLE DOOR CONTROLLER	Jaily			
	DOORS / GATES / CABS	We still service equipment w	e built 50 years ago			
	RAILS	TITI F		REV/	SCALE	SHT
1	ELECTRICAL		TDOLLED	11/2	JOALL	3111
	STOCKROOM					
	FINAL ASSEMBLY		-SPEED STAGGERED	-	N/A	1 OF 5
	SHIPPING	LINE - STD AN	ID SLA			
1	SHOP FIELD FOLDER	DATE		DRAWING		
1	CUSTOMER F&D			SD		
		DRAWN BY		טט		

NO DATE REVISION BY

SLA OR STD OPERATION - DESCRIPTION


SEE ELEVATOR CONTROLLER DRAWINGS AND FOLLOW THE CORRECT PANEL TO PANEL CONNECTIONS FOR EITHER SLA OR STD OPERATION CONTROL INTERFACE. SET OR REMOVE JUMPER $\pm 24-$ SLA AS REQUIRED.

NOTE: CONTROLLER CAN NOT OPERATE IN BOTH SLA AND STD MODES.

SLA OPERATION
SLA OPERATION IS LIKE A PASSENGER DOOR
CONTROLLER WITH RETIRING CAM. DOOR OPEN AND
CLOSE BUTTONS ARE NOT WRED TO THE PEELLE
CONTROLLER. LIGHT CURTAIN REVERSAL, FIRE SERVICE
OPERATION, AND AUTOMATIC CLOSING ARE ALL HANDLED
BY THE ELEVATOR CONTOLLER. DOOR LIMITS AND
SEQUENCE OPENING AND CLOSING IS DONE BY THE
DOOR CONTROLLER USING THE SLA OPERATION CONTROL
INTERFACE INITIATIONS.

STD OPERATION
STD OPERATION IS THE TRADITIONAL STAND—ALONE
FREIGHT DOOR CONTROL SUPPLIED BY PEELLE. ALL
DOOR DEVICES ARE WIRED DIRECTLY TO THE DOOR
CONTROLLER. DOOR OPEN AND CLOSE BUTTONS, LIGHT
CURTAIN REVERSAL, FIRE SERVICE OPERATION,
AUTOMATIC CLOSING, AND DOOR LIMITS FOR SEQUENCE
OPEN AND CLOSE ARE ALL HANDLED BY THE DOOR
CONTROLLER USING THE STD OPERATION CONTROL
INTERFACE INITIATIONS.

[SQUARE BRACKETS] = PLC OR RELAY INDICATOR HI = LIGHT ON, LO = LIGHT OFF

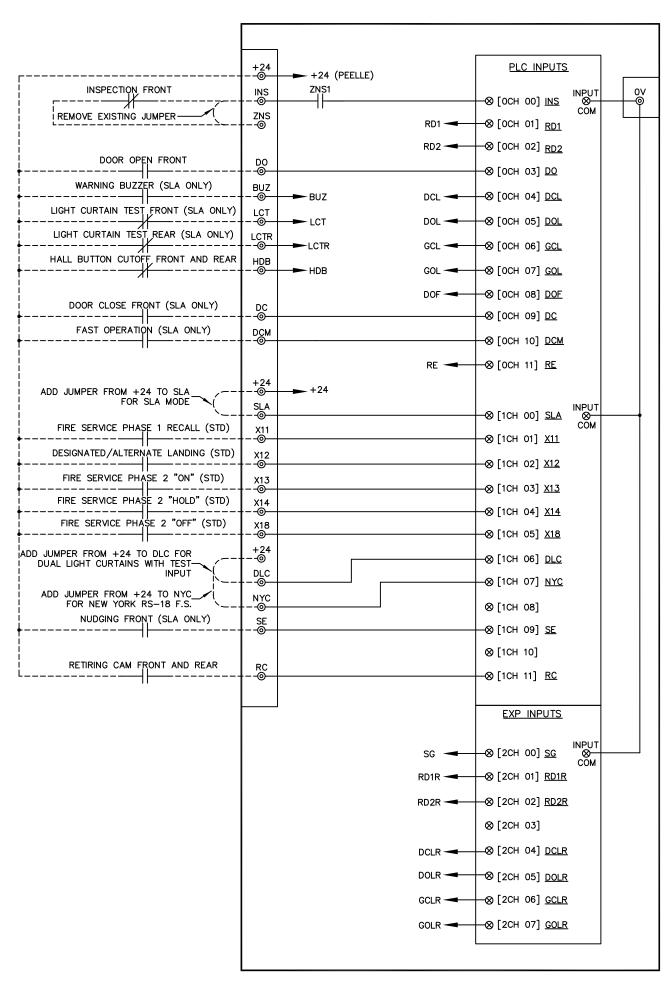

SLA OPERATION - CONTROL INTERFACE

 ± 24 —SLA [1CH 00] — (ADD JUMPER) SLA OPERATION SETTING HI = SLA MODE

 $\pm 24-D0$ [OCH 03] DOOR OPEN INITIATION - FRONT AND REAR HI (CONSTANT) = DOOR OPEN

 $\pm 24-DC$ [OCH 09] DOOR CLOSE INITIATION FRONT AND REAR HI (CONSTANT) = DOOR CLOSE

+24-DCM [OCH 10]
SIMULTANEOUS OPERATION DOOR AND GATE
OPERATION - FRONT AND REAR
HI (CONSTANT) = SIMULTANEOUS

 ± 24 —SE [1CH 09] GATE CLOSE SLOW SPEED (NUDGING) — FRONT AND REAR HI = SLOW SPEED, LO = NORMAL SPEED

 $\pm 24-RC$ [1CH 11] RETIRING CAM INITIATION — FRONT AND REAR HI = LIFT CAM, LO = WHENEVER CAR IS STOPPED

+24-BUZ [NO INDICATOR]
DOOR CLOSE WARNING BUZZER - FRONT AND REAR
HI = BUZZER ON

 $\pm 24-$ LCT [NO INDICATOR], $\pm 24-$ LCTR LIGHT CURTAIN TEST HI = NORMAL, LO (MOMENTARY) = INITIATE TEST (ELEVATOR CONTROL TO REGISTER CHANGE OF STATE OF RD1 AND RD2 TO COMPLETE TEST)

STD OPERATION - CONTROL INTERFACE

 $\pm 24 - SLA$ [1CH 00] - (REMOVE JUMPER) STD OPERATION SETTING NO JUMPER ± 24 TO SLA LO = STD MODE

+24-DLC [1CH 06] - (ADD JUMPER WHERE REQUIRED)
DUAL LIGHT CURTAINS WITH TEST INPUT FOR ASME A17.1-2008 TO 2010 CODE REQUIREMENTS
SEM JUMPER +24 TO DLC
REMOVE JUMPER +24 TO RD2 AND +24 TO RD2R
INPUT HI - INDICATOR ON

+24-NYC [1CH 07] - (ADD JUMPER WHERE REQUIRED)
NEW YORK CITY RS-18 FIRE SERVICE REQUIREMENTS
SET JUMPER +24 TO NYC
INPUT HI - INDICATOR ON

ZNS—INS [OCH 00]
(REMOVE PURPLE JUMPERS)
INSPECTION CIRCUIT CUT—OFF — FRONT AND REAR
HI = DOOR OPERATION, LO = DOORS STOP

 ± 24 —DO [OCH 03] DOOR OPEN, AUTO-OPEN INITIATION - FRONT AND REAR HI (MOMENTARY) = DOOR OPEN

+24-DCM [OCH 10]
HI (MOMENTARY) = DOOR CLOSE - FRONT AND
REAR (EXCEPT FIRE SERVICE, CONSTANT
PRESSURE REQUIRED)

 $\pm 24 - X11$ [1CH 01] PHASE 1 EMERGENCY RECALL OPERATION HI = PHASE 1 IS "ON", LO = STD OPERATION

+24-X12 [1CH 02] HOLD OPEN INITIATION FOR AUTO-CLOSE AND PHASE 1 DESIGNATED/ALTERNATE LANDING HI = HOLD OPEN

+24-X13 [1CH 03]
PHASE 2 EMERGENCY IN-CAR OPERATON "ON"
HI = PHASE 2 "ON"

+24-X14 [1CH 04]
PHASE 2 EMERGENCY IN-CAR OPERATION "HOLD"


+24-X18 [1CH 05]
PHASE 2 EMERGENCY IN-CAR OPERATION "OFF"
HI = PHASE 2 "OFF", LO = (AFTER RESET)

 $\pm 24-RC$ [1CH 11] RETIRING CAM INITIATION — FRONT AND REAR HI = LIFT CAM, LO = WHENEVER CAR IS STOPPED

<u>+24-HDB</u> - (REMOVE PURPLE JUMPER WHEN USED) HALL BUTTON CUT-OFF INITIATION FRONT AND

NOTES:
EXTERNAL WIRE
INTERNAL WIRE
1. ALL LIMIT SWITCHES AND CONTACTS SHOWN WITH NO ACTION APPLIED 2. © TERMINAL CONNECTION ON DOOR CONTROLLER 3. ① COMPONENT TERMINAL CONNECTIONS 4. ⊗ I/O TERMINAL CONNECTION ON PLC 5. CAR AND HALL PUSH BUTTONS BY OTHERS

ROUTING		PEELLE CONTROLLER MANUFACTURED FOR NEMA 1 RATED MACHINE ROOM.				
QTY	DEPARTMENT	The Peelle Company We still service equipment we built 50 years ago				
	MANUFACTURED PARTS				nany	
	SPECIAL PARTS					niipaiiy
	DOORS / GATES / CABS					
	RAILS	TITLE DOOR CONTROLLER 274202D PLC 2-SPEED STAGGERED LINE - STD AND SLA		REV	SCALE	SHT
1	ELECTRICAL				JOALL	3111
	STOCKROOM			_	N/A	2 OF 5
	FINAL ASSEMBLY					
	SHIPPING					
1	SHOP FIELD FOLDER	DATE		DRAWING		
1	CUSTOMER F&D			SD		
		DRAWN BY		30		l

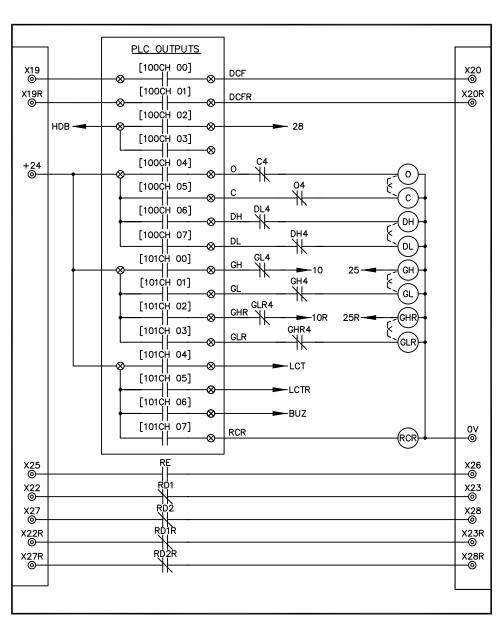

PLC OUTPUTS - INTEFACE OUTPUTS

DCF [100CH 00], DCFR [100CH 01] DOOR CLOSE FINAL SIGNAL HI = DOOR CLOSED X19-X20 CLOSES WHEN DOORS ARE

28 [100CH 02]
HI = HALL DOOR BUTTONS ACTIVE
LO = HALL BUTTONS DISABLED IN

Q [100CH 04] = OPEN DIRECTION CONTACTOR

 \underline{C} [100CH 05] HI = CLOSE DIRECTION CONTACTOR

 $\frac{\mathrm{DH}}{\mathrm{HI}}$ [100CH 06] HI = DOOR HIGH SPEED CONTACTOR

DL [100CH 07] HI = DOOR LOW SPEED CONTACTOR

 $\underline{\text{GH}}$ [101CH 00], $\underline{\text{GHR}}$ [101CH 02] HI = GATE HIGH SPEED CONTACTOR

 $\underline{\text{GL}}$ [101CH 01], $\underline{\text{GLR}}$ [101CH 03] HI = GATE LOW SPEED CONTACTOR

LCT [101CH 04], LCTR [101CH 05] HI = LIGHT CURTAIN ACTIVE HI-LO-HI = TEST SEQUENCE STARTED

BUZ [101CH 06] CLOSE WARNING BUZZER HI = 5 SECONDS BEFORE AUTO—CLOSE AND DURING ALL CLOSING OPERATION

RCR [101CH 07]
HI = RETIRING CAM CONTACTOR

RD1 [RELAY], RD1R [RELAY], LIGHT CURTAIN #1 X22-X23 CONACT CLOSES WHEN BEAMS ARE BLOCKED - RELAY ON WHEN BEAMS ARE CLEAR

RD2 [RELAY], RD2R [RELAY], LIGHT CURTAIN #2
X27-X28 CONACT CLOSES WHEN BEAMS ARE BLOCKED - RELAY ON WHEN BEAMS ARE CLEAR HOISTWAY DOOR AND GATE CONTROL DEVICE INPUTS

+24-15 [ZNS RELAY] AT LANDING ZONE INPUT - FRONT AND REAR HI = DOOR OPERATION, LO = DOORS STOP

+24-35-ZNS [OCH 00] CHECK FOR INPUT BEFORE INITIAL DOOR OPERATION !!! UNLOCKING DEVICE SWITCH AND DOOR STOP HI = DOOR OPERATION, LO = DOORS STOF

 $\pm 24-RD1$ [OCH 01], $\pm 24-RD1R$ [2CH01] LIGHT CURTAIN #1 LOCATED OUTSIDE CAR GATE HI = HI-NOT OBSTRUCTED, LO = OBSTRUCTION

 $\pm 24-RD2$ [OCH 02], $\pm 24-RD2R$ [2CH 02] REMOVE JUMPER IF DUAL LIGHT CURTAIN IS USED LIGHT CURTAIN #2 LOCATED INSIDE CAR GATE HI = HI-NOT OBSTRUCTED, LO = OBSTRUCTION

 $\pm 24-$ DCL [OCH 04], $\pm 24-$ DCLR [2CH 04] DOOR CLOSE SLOW DOWN HI = HI-SPEED, LO = SLOW DOWN

+24-DOL [OCH 05], +24-DOLR [2CH 05] DOOR OPEN SLOW DOWN HI = HI-SPEED, LO = SLOW DOWN

<u>+24-GCL</u> [OCH 06], <u>+24-GCLR</u> [2CH 06] GATE CLOSE SLOW DOWN HI = HI-SPEED, LO = SLOW DOWN

 $\pm 24-$ GOL [OCH 07], $\pm 24-$ GOLR [2CH 07] GATE OPEN SLOW DOWN HI = HI-SPEED, LO = SLOW DOWN

+24-DOF [OCH 08] DOOR OPEN FINAL (AUTOMATIC STAY OPEN) -FRONT AND REAR = FULL OPEN, LO = RE-OPEN IF DRIFT CLOSE

<u>+24-RE</u> [RE RELAY][0CH 11] REVERSING EDGE - FRONT AND REAR (STD OPERATION ONLY) HI = HI-OBSTRUCTED, LO = NO OBSTRUCTION

<u>+24-SG</u> [2CH 00] STAGGERED REAR GATE INPUT HI = REAR GATE OPERATION LO = FRONT GATE OPERATION

SG RD1R RD2R

DCLR DOLR GCLR GOLR

EXPANSION UNIT PLC 8 (PNP)INPUTS

IN

IN

00 01 02 03

2CH 04 05 06

USER SETTINGS

!!!BE VERY CAREFUL WHEN ADJUSTING THE POTS!!! NOTE: USE A SMALL SCREW DRIVER AND TAKE CARE NOT TO DAMAGE POTENTIOMETERS.

OPEN & CLOSE DIRECTION TIME-OUT (POT#0) DOOR FINAL POSITION MOTOR SHUT-OFF POT #0 = FINAL TIME-OUT SETTING Note: Factory set to shut off motors 3 seconds after both door and gate go into slow-down. Should be adjusted to give enough time to open and close fully with an additional 1 second to stall.

AUTO-CLOSE (POT#1) STD OPERATION ONLY!

SET AUTOMATIC TIME CLOSING:

TURN POT#1 FULLY COUNTER-CLOCKWISE = OFF

(DEFAULT, NO AUTO-CLOSE)


(MAXIMUM TIME) FROM FULLY COUNTER-CLOCKWISE POSITION: TURN POT#1 SLOWLY UNTIL BUZ Ouput [101CH 06] FLASHES ONCE (2ND INCREMENT). AT THIS POSITION TIMER IS SET AT 15 SECONDS.

SLOWLY INCREMENT POT#1 TO DESIRED POSITION FOR AUTO-CLOSE TIME. WITH EACH INCREMENT BUZ OUTPUT [101CH 06] FLASHES ONCE.

REMOVING AUTOMATIC TIME CLOSING:
• TURN POT#1 FULLY COUNTER-CLOCKWISE. BUZ Output [101CH 06] FLASHES TWICE. AUTO-CLOSE IS TURNED OFF.



AUTO-CLOSE (POT#1)
SLOWLY INCREMENT POT#1 TO DESIRED POSITION
FOR AUTO-CLOSE TIME. WITH EACH INCREMENT BUZ OUTPUT [101CH 6] FLASHES ONCE. STD OPERATION ONLY. SEE ELEVATOR CONTROL FOR SLA AUTO-CLOSE.

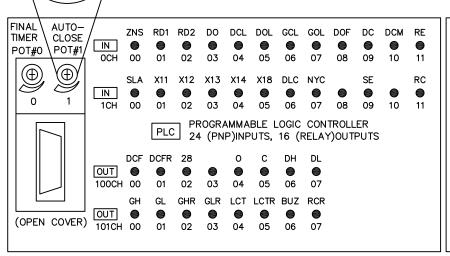

ROUTING

	ROUTING	FOR NEMA 1 RATED MACHINE ROOM.				
QTY	DEPARTMENT	Freight Elevator Doors Since 1905				
	MANUFACTURED PARTS	The The		e Peelle Company		
	SPECIAL PARTS					
	DOORS / GATES / CABS	We still service equipment w				
	RAILS	TITLE DOOR CONTROLLER 274202D PLC 2-SPEED STAGGERED LINE - STD AND SLA		REV	SCALE	SHT
1	ELECTRICAL			11.0	JOALL	3111
	STOCKROOM			_	N/A	3 OF 5
	FINAL ASSEMBLY					
	SHIPPING					
1	SHOP FIELD FOLDER	DATE		DRAWING		
1	CUSTOMER F&D			SD		
		DRAWN BY		J <i>D</i>		

PEELLE CONTROLLER MANUFACTURED

NOTES:
EXTERNAL WIRE
INTERNAL WIRE
1. ALL LIMIT SWITCHES AND CONTACTS SHOWN WITH NO ACTION APPLIED
2. © TERMINAL CONNECTION ON DOOR CONTROLLER 3. © COMPONENT TERMINAL CONNECTIONS 4. © 1. (2. TERMINAL CONNECTION ON DISC.)
4. ⊗ I/O TERMINAL CONNECTION ON PLC 5. CAR AND HALL PUSH BUTTONS BY OTHERS

