

SAFETY LABEL PACKAGES



Help ensure operator safety when you apply our safety labels to any freight elevator.

Safety Label Kits are available for both manual and power operated doors.

Manual Freight Elevator Door Operation Instructions

CAUTION

- This is a freight elevator, not a passenger elevator, and not for general public use
- Do not attempt to operate this elevator unless you are authorized to do so
- Read and obey any posted usage, notice, caution or warning signs
- Stay back and keep hands and arms away from the leading edge of the doors
- Do not reach through the door to pull the outside pull strap
- Open and close doors carefully and do not slam the doors

Entering or Exiting a Freight Elevator

OPENING - MANUAL OPERATION

- Look through vision panel or car gate to ensure car is stopped and level with the landing
- LANDING DOOR**
 - Push door open using the lower panel recess plate or top of lower panel
 - Step onto the top of the lower panel to ensure door is fully open
- CAR GATE**
 - Lift gate using lifting bar or recess plate
 - Push the bottom of the car gate to ensure it opens fully

CLOSING - MANUAL OPERATION

- Stand clear of the landing door or car gate with both feet on the floor
- Grasp the pull strap with both hands
- Use pull strap closest to you
- Do not reach through to the outside pull strap
- LANDING DOOR**
 - Pull down and towards you to close the landing door until door is fully closed
- CAR GATE**
 - Pull down and towards you to bring the car gate down
 - Push the car gate fully closed using the lifting bar or panel recess plate

WARNING

CRUSHING HAZARD
DO NOT REACH THROUGH OPENING WHILE DOORS ARE CLOSING.
USE PULL STRAP TO CLOSE DOORS
CLEAR OPENING BEFORE CLOSING DOORS

CAUTION

TRIPPING HAZARD
OPEN DOORS FULLY AND ENSURE DOOR SILL IS FLUSH WITH FLOOR.
USE PUSH PLATE TO OPEN DOORS

WARNING

- Report any missing, damaged or broken pull straps to the facility manager
- Do not tie knots or loops in the pull straps - use original equipment replacements
- Do not attempt to open doors with fork truck - only open doors by hand
- In case of mis-leveling do not use elevator and report to the facility manager
- Do not reach in gap between doors

A17 060342-EN

WARNING

Crushing hazard!
Do not reach through opening while doors are closing.

Use pull strap to close doors.
Clear opening before closing doors.

THE PEELLE CO. 060021-EN

CAUTION

Tripping hazard!
Open doors fully and ensure door sill is flush with floor.

Use push plate to open doors.

THE PEELLE CO. 060026-EN

CAUTION

STAND CLEAR

DOOR PANEL FROM ABOVE WILL ENTER THIS AREA

THE PEELLE CO. 060339-EN



OCT 2021