


PROTECTOR LIGHT CURTAIN

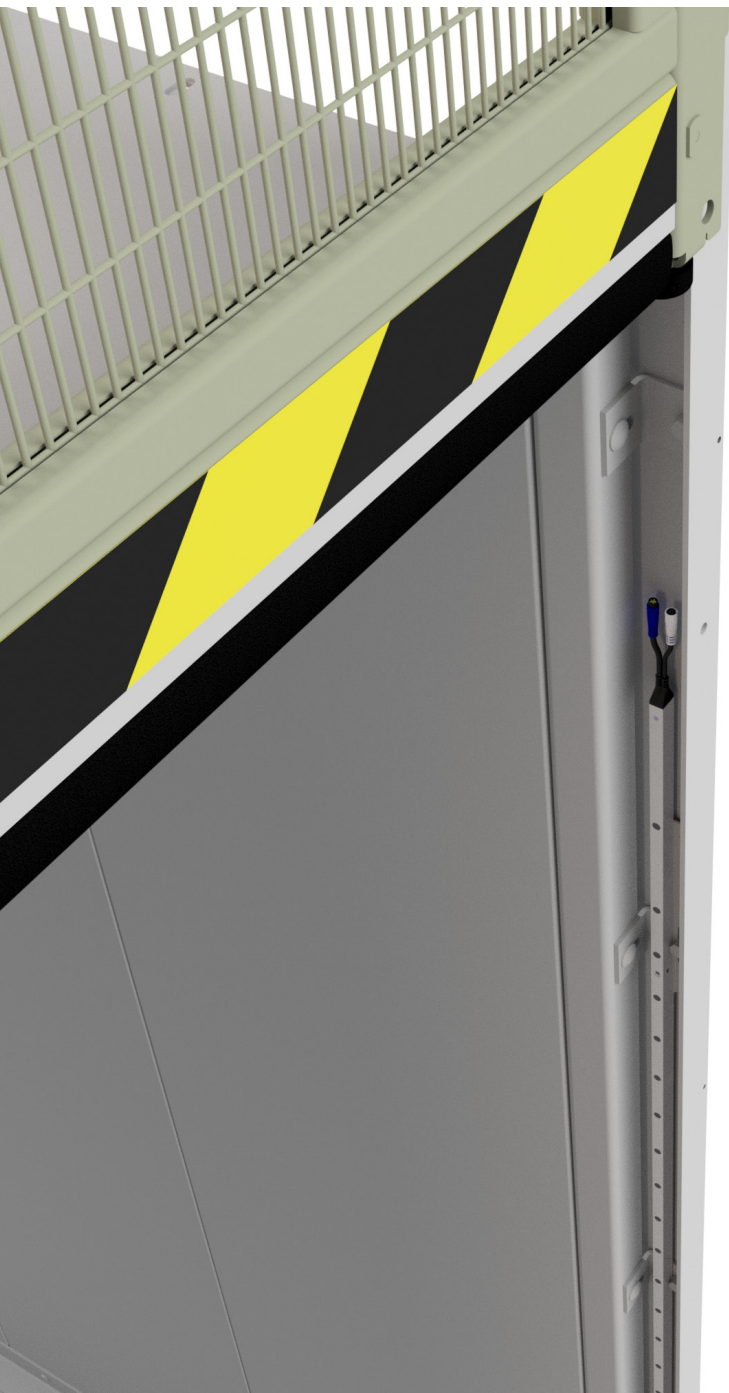

Ensure user and product safety.

The protector non-contact safety light curtain fits easily into the existing gate rails of any manufacturer, offering complete entrance protection.




PACKAGE INCLUDES:



LIGHT CURTAIN

4804 (short range up to 14 ft opening width)

4805 (long range 14ft - 32ft opening width)

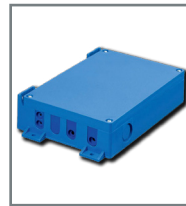

POWER SUPPLY

103600 Single Light Curtain PSU

Power Door Operation Instructions	
CAUTION	
<ul style="list-style-type: none"> ► This is a freight elevator, goods lift, auto lift or cargo lift and is not for general public use ► Do not attempt to operate this elevator or lift unless you are authorized to do so ► Read and obey any posted usage, notice, caution or warning signs ► Stay back and keep hands and arms away from the leading edge of the doors ► Listen and look for audible door close warning signals ► Power doors can be stopped and reopened by pressing the door open button 	
Entering or Exiting	
OPENING - POWER OPERATION IF THE ELEVATOR (LIFT) IS NOT AT THE LANDING AUTOMATICALLY OPENING DOORS 1) Landing door and car door (gate) will open automatically when elevator (lift) arrives 2) Stand clear of the landing door and car door (gate) until they are fully open TO OPEN / RE-OPEN CLOSED DOORS, WHILE AT A LANDING OR IN THE ELEVATOR (LIFT) 1) Look through the vision panel or car door (gate) 2) Ensure elevator (lift) is stopped and level with the landing 3) Push door open button or elevator (lift) call button to initiate opening 4) Stand clear of the landing door and car door (gate) until they are fully open CLOSING - POWER OPERATION FOR CONSTANT PRESSURE PUSHBUTTON CLOSING 1) Stand clear of the landing door and car door (gate) 2) Press and hold the door close button 3) Release close button to reopen the doors while closing FOR MOMENTARY PRESSURE PUSHBUTTON CLOSING 1) Stand clear of the landing door and car door (gate) 2) Press and release the door close button 3) Press the door open button to reopen the doors while closing FOR AUTOMATIC TIMED CLOSING 1) An audible signal will sound prior to door close 2) Stand clear of the landing door and car door (gate) 3) Press the door open button to reopen the doors while closing	<div style="text-align: center;">CAUTION</div> <p>CLEAR THE OPENING BEFORE CLOSING DOORS AUDIBLE WARNING WILL SOUND WHEN DOOR IS CLOSING</p>
	<div style="text-align: center;">WARNING</div> <p>PINCH POINT KEEP HANDS CLEAR DURING OPERATION</p>
	<div style="text-align: center;">WARNING</div> <p>DO NOT ATTEMPT TO OPEN DOORS WHILE ELEVATOR IS MOVING OR IS STOPPED BETWEEN FLOORS</p>
WARNING	
<ul style="list-style-type: none"> ► Report any damaged or broken door components to the facility manager ► Do not attempt to open doors manually or with fork truck ► In case of mis-leveling do not use elevator (lift) and report to the facility manager ► Do not reach in gap between doors 	
A17 / EN81	APRIL 2018
060347-EN	

SAFETY LABEL PACKAGE

Available in English, French, Spanish, German and Mandarin.