



We still service equipment we built 50 years ago

**The Peelle Company**

373 Nesconset Hwy, #311, Hauppauge New York, 11788-2516

Tel: (631)231-6000 • 800-787-5020 • Fax: (631)231-6059 • www.peelledoors.com

February 5th, 2010

## **TECHNICAL BULLETIN**

### **SPECIAL INSTALLATION INSTRUCTION**


**SUBJECT:** REPLACEMENT DOOR MOTOR

**EQUIPMENT:** PEELLE 056910M DOOR MOTOR

**DESCRIPTION:** PEELLE HAS DISCOVERED THAT WHEN REPLACING A 056910M DOOR MOTOR, THE BOSS ON THE MOTOR FACE COULD INTERFERE WITH THE EXISTING GEAR ON THE SHEAVE ASSEMBLY.

**ACTION:** BEFORE INSTALLING A NEW 056910M DOOR MOTOR, PLACE THE MOTOR IN POSITION AND CHECK THE GAP BETWEEN THE MOTOR BOSS AND THE SHEAVE GEAR. IF THE BOSS IS LESS THAN 1/16" AWAY FROM THE GEAR, USE THE MOTOR SPACER SHIM INCLUDED WITH THE REPLACEMENT MOTOR.

**PEELLE HELP:** SHOULD YOU REQUIRE TECHNICAL ASSISTANCE, PLEASE CALL FRANK LEO AT (905) 846-4545 x230 OR STEVE MULLEN AT x215.

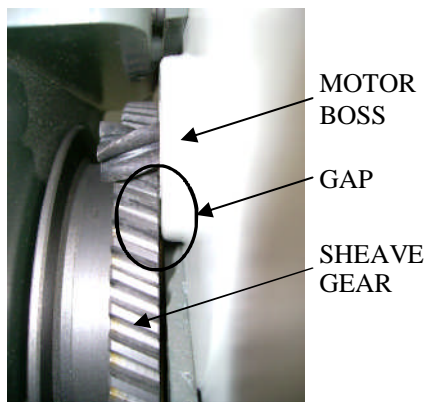


**1. HOLD NEW MOTOR IN PLACE AND CHECK GAP**  
IF LESS THAN 1/16" GAP, USE MOTOR SPACER SHIM. IF GAP IS 1/16" OR GREATER, INSTALL MOTOR WITHOUT MOTOR SPACER SHIM.



MOTOR SPACER SHIM. MAY NOT BE EXACTLY AS SHOWN.



**2. PLACE MOTOR SPACER SHIM ON SHEAVE ASSEMBLY**  
USE 3/8" x 3/4" SOCKET HEAD CAP SCREW AND 3/8" WHIZ NUT TO HOLD MOTOR SPACER SHIM IN PLACE. USE BOTTOM MOUNTING HOLE.

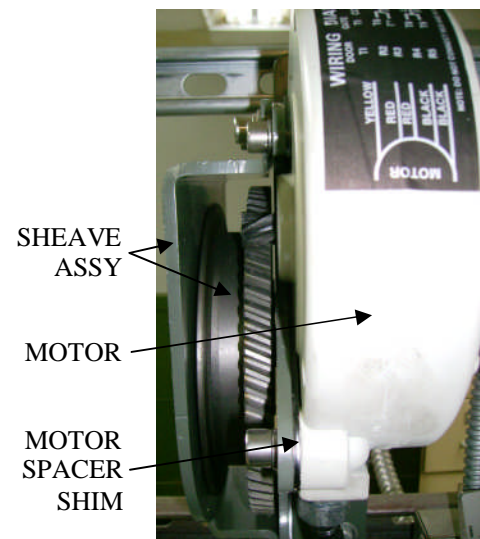

**3. REPLACEMENT MOTOR MOUNTED ON SHEAVE ASSEMBLY WITH MOTOR SPACER SHIM**